

INSTRUCTIONS



WARNINGS


PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE COMMENCING ANY WORK



- This is a Class 2 product – no earth required
- This unit **must** be fitted by a competent and qualified electrician.
- Install in accordance with IEE wiring regulations and current Building Regulations.
- To prevent electrocution, switch off mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge.
- This light fitting should be connected to a circuit with a 30Ma RCD fitted.
- When changing the bulb(s), always switch off at the mains & allow the bulb to cool before handling – **LAMP WILL GET HOT WHEN IN USE.**
- All connections should be made as watertight as possible to avoid electrical shortage.
- Always use the correct type & wattage of bulb. Never exceed the wattage stated.
- The unit may get warm whilst on for a period of time.



Materials: Fibre Glass
Voltage: 220-240v
Max. Wattage: 20W
Lamp Fitting: E27
Recommended Lamp: LED
IP Rating: IP44
Product Size: Various
Cable: None Supplied

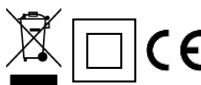

✓✓
**2 YEAR
GUARANTEE**

see website for
more details

TIP: As the LUXROX uses a standard E27 bulb, this enables more choice when it comes to selecting the preferred type of LED bulb; colour and brightness.





INSTALLATION:

- Remove the base by unscrewing the 4 x screws.
- Unscrew the top dome of the M20 Cable Gland and push through cable from the rock painted side of the base & locking nut, leaving plenty of wire protruding to allow for wiring. **DO NOT TIGHTEN CABLE GLAND.**
- Connect the cable to the connector block as per the wiring diagram below, matching the coloured wires and ensuring all terminals are securely tightened onto the connector of the wire with no loose strands.
- Pull excess cable back through the gland, leaving some slack for movement and tighten the cable gland to clamp in place.
- Install screw in E27 bulb.
- Replace the base and secure in place with the 4 x screws removed in step one. **DO NOT OVERTIGHTEN** or this could damage the outer shell. If there is damage around the predrilled holes, simply drill new holes in a slightly different location to ensure the base is fitted securely.
- Mount the Rock Light in desired location with ground spike provided (see overleaf).

NOTES:

- Ensure all cabling is positioned carefully around the edges of the garden, in protective conduit or similar, to avoid damage after installation. Alternatively, armoured cable could be used. If buried, all 240v cable must be buried at least 0.5m deep.
- If the cable used has a small diameter and the cable gland is not clamping, wrap some electrical / self-amalgamating tape around that area to increase the diameter of the cable. The cable gland will then clamp tighter.

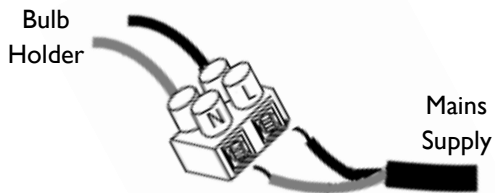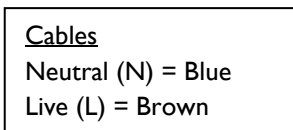

BULB INSTALLATION:

- Turn off the power supply.
- Remove the base by unscrewing the 4 x screws.
- Screw the E27 / ES bulb into the bulb holder – **DO NOT** exceed maximum wattage or over tighten.
- Ensure the cables have not become loose when removing the base.
- Replace the base and secure with the 4 x screws. **DO NOT OVERTIGHTEN** or this could damage the outer shell. If there is damage around the predrilled holes, simply drill new holes in a slightly different location to ensure the base is fitted securely.

Full LUXROX Range & More Information:

GROUND SPIKE INSTALLATION:

IMPORTANT

It is extremely important not to force the ground spike into harder ground as this can result in broken or damaged lights and will invalidate the warranty. Please follow the guidelines below

A four-fin anchor spike has been included for securing the LUXROX into soft ground, measuring 150mm in length and 30mm in diameter.

Mounting into Earth: Soak the area with water until the spike locations becomes wet mud, to a depth of 170mm. Attach the spike to the threaded socket provided on the LUXROX base and gently push into the wet mud. If there is resistance, add a little more water to soften the earth. Once dry, the ground spike will be secure.



Mounting into Grass: Remove a small area of turf. Follow the “Mounting into Earth” instructions above.

Mounting into Gravel or Stones: Dig a hole 100mm in diameter and 170mm deep. Fill with wet sand. Attach the spike to the threaded socket provided on the LUXROX base and gently push into the wet sand. Push down on the top layer of sand to ensure it is tightly surrounding the spike. Once the sand is dry, the light will be secure.

CLEANING:

Occasional cleaning and care is recommended for this product to avoid a build-up of grime common in an outdoor environment. Simply wipe clean with a damp, soft cloth to remove excess dirt. Do not scrub the exterior or use abrasive cleaners as this could damage the finish. Please visit our website for more information on cleaning different materials.

FOUR DIFFERENT SIZES:

LUXROX 1

260 X 240 X 230mm (h)



LUXROX 2

370 X 260 X 280mm (h)



LUXROX 3

505 X 360 X 287mm (h)



LUXROX 4

460 X 435 X 290mm (h)



THREE DIFFERENT FINISHES:

WHITE GRANITE



SANDSTONE



SLATE GREY



RETURNS:

Returns will only be accepted with our prior agreement when a returns number will be issued. Please contact us prior to returning goods, and include the relevant documents. Please see our website for more information.

RETURNS, Lumena Lights Ltd, Centre 33 Long March, Daventry, Northants, NN11 4NR

Tel: +44 1327 871161

Fax: 0800 066 4410

Email: sales@lumenalights.com

Producer Registration Number:
WEE/KC3440XY

www.lumenalights.com